

# HESSTAR

## CERAMIC COOKER


HC-D2KW




### INSTRUCTION MANUAL

Please read this manual carefully.  
To keep this manual in the place accessible by a user at any time.

## Product Configuration

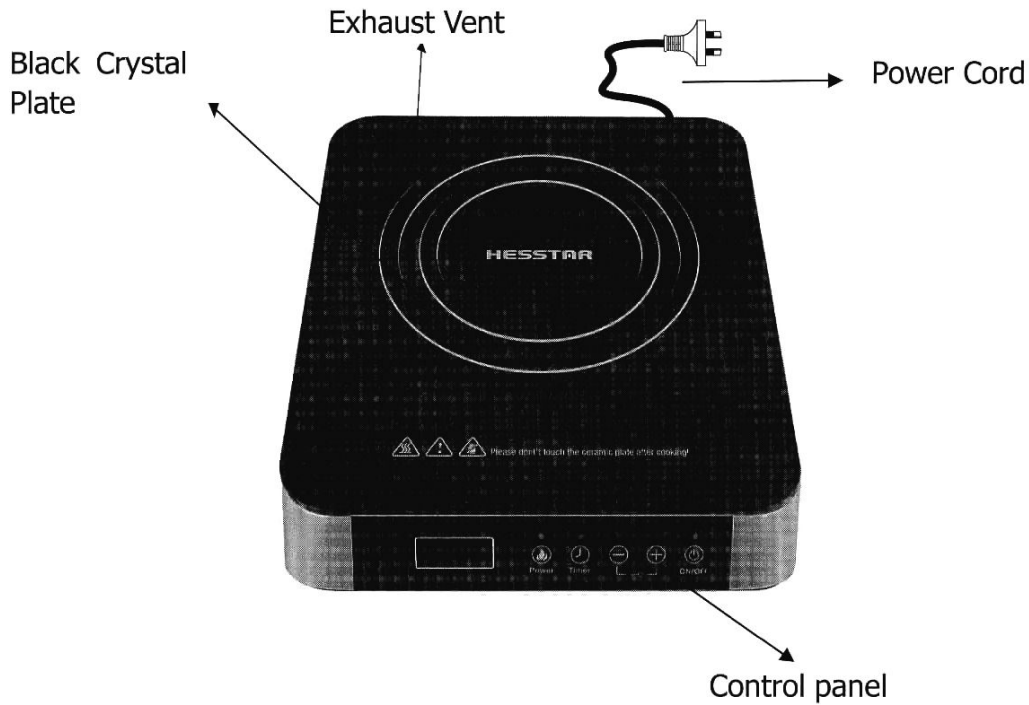

## Control Panel(JDL-H20D17)

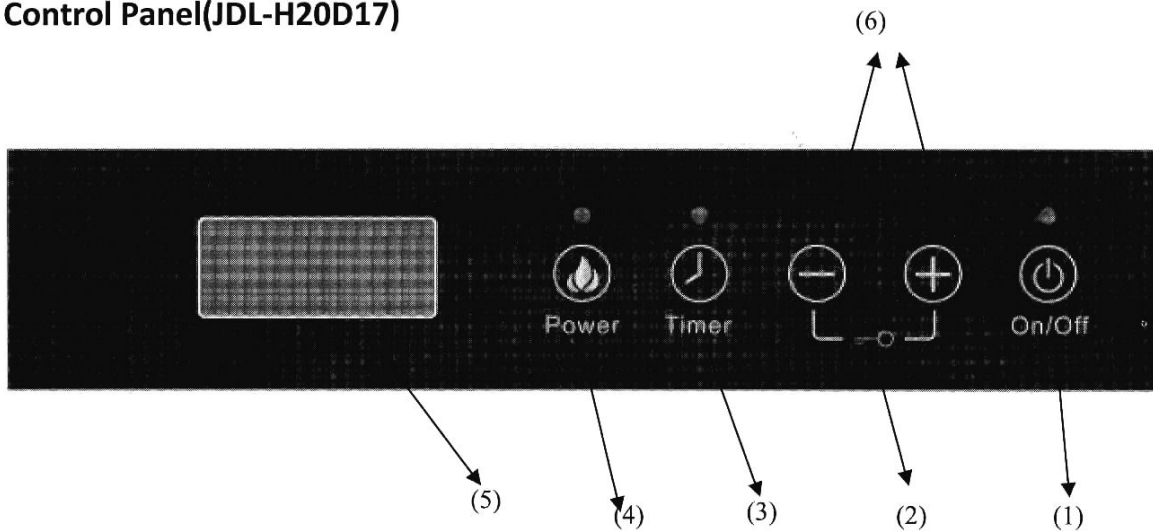

| Key/ Indicator Light | Name       | Description                          |
|----------------------|------------|--------------------------------------|
| Key 1                | On/Off key | Switch to stand-by or on/off mode    |
| Key 2                | Lock key   | Lock the control panel               |
| Key 3                | Timer key  | Switch to Timer function             |
| Key 4                | Power Key  | Switch to power mode                 |
| Key 5                | Display    | Power/Timer display                  |
| Key 6                | +/- Key    | Increase or decrease the power/timer |

## Safety Cautions

### Warning :

**Switch off the infrared cooker in case of any crack on the cook-top panel.**

1. Please do not open, modify parts, or repair the unit by yourself.
2. When the power cord is damaged or the power plug not firmly seated into the socket, please do not use it.
3. Please do not make any dust or obstructions in the power cord.
4. Please do not bend, band or pull the power cord, avoid damaged.
5. Please don not touch the power cord when wet your hands.
6. Please do not use the unit near the fire or moist place.
- 7 Prohibit using when the pan without any food and water.
8. Do not use the pot or wok which the bottom has been brushed varnish.
9. If the glass has a crack, please turn off the power and send it to repair.
10. After cooking, should not immediately pull the plug, waiting the temperature drop until the fan stopped.
11. Do not unplug the power cord directly to turn it off.
12. In order to avoid to break the glass, please be careful, can't drop the things on the top plate.
13. Please be careful the power cord and plastic things can't near the top plate when cooking.
14. Please do not put the plastic container and paper on the top plate to heating.

**In order to avoid scald, please note the following when you using:**

Please do not using where the child can touch.

Please do not using as without pot.

Please clean the bottom of the pot before using, in order to avoid burning.

## 2. Product operating instructions

1. After inserting the plug into the socket, a "Beep" will emit and the indicator above the [On/Off] key will start to flash, indicating the appliance in connection with a power source, known as standby mode.
2. Place a cookware on the center of the cooking zone. The display shows [----] when [On/Off] key is pressed once, the appliance goes to selection mode and the indicator above [On/Off] remains light up.
3. Press the corresponding function keys to start operation. Stop the operation and switch to standby mode by pressing [On/Off] key after cooking.
4. Press POWER function key, and the default power is 2000W. You can use the +/- to adjust the power from 2000W-100W(100W,200W,300W,400W,500W,600W,700W,800W,900W,1000W,1100W,1200W,1300W, 1400W,1500W,1600W,1700W,1800W,1900W,2000W)
5. Timer: In working state, press the "Timer" button, the digital display show default time "30" You can use the +/- to adjust the time from 10minutes to 180minutes or from 180minutes to 10minutes by 10increments. The working hours will be confirmed after 5S and the unit enter countdown working.
4. Lock button: In working state, after pressing LOCK or +&- together, all other button can't be used, LED will display LOC, in order to avoid children to play it. And pressing LOCK or +/- together again continuous 5 seconds to unchain lock.

### 3. Selection of Cookware

#### Material required:

- Material: Iron, Aluminum, Alloy, crock, pottery, casserole, heat resistant pots and pans are applicable.
- Shape: Flat bottom cookware, its diameter is the same with electric ceramic cooker's heating zone(18cm), achieve the best cooking result.
- Noted: Metal objects, such as knives, forks, spoons and lids should not be placed on the heating area, they will become extremely hot.
- WARNING: Turn off the appliance to avoid electric shock, if there are cracks on the surface.

### 4. Maintenance and Daily Care

1. Remove the power plug prior to clean the unit. Do not clean it until the surface cools down.
2. Glass plate, panel and the shell:
  - ① Soft cloth for slight stain.
  - ② For greasy, dirt, blot by using a clean damp cloth with neutral detergent.
3. While the radiator-fan working, dust and dirt would remain on the gas vent, please clean it by
4. brush or cotton stick regularly.
5. Remember do not washing the unit by water directly to avoid damaging.
6. To protect induction cooker, be sure to have a good contact between plug and socket before
- 7 using.
8. Do not pull out the power cord directly during operation. To extend the appliance's using life,,
9. press the "ON/OFF" button first, then pull out the power cord.
10. In order to make operating time longer, the fan would still working for cooling the plate, is
11. better to plug out after the fan stops working.
12. Please pull out the power cord and put it away when not used for a long time.
13. Some models have structural design to against cockroaches, if needed, can put something like
14. mothball to expel the cockroaches.

### 5. Troubleshooting and Treatment

During operations, if any error occurred, please check the following table before calling for service. Below are common errors and the checks to perform.

| Symptoms  | Check points   | Remedy   |
|---|--|--|
| After connecting the power and pressing the "power" key, the appliance has no response. | Is the electricity in suspension?  | Use after resuming the electricity.  |
|   | Is the fuse broken down?   | Check the root causes carefully. If the problem cannot be fixed, please contact Service Centre for checking and repairing. |
|   | Is the plug connected firmly?  |  |
| Heating being interrupted in normal use and a "Beep" will be heard.                     | Incompatible cookware or no cookware is used?                                | Replace compatible cookware for the induction cooker.  |
|   | Is the cookware not considerably placed form the center of the heating zone? | Place the cookware at the center of the defined heating zone.  |
|   | Is the cookware being heated but continually being removed?                  | Place a cookware inside the heating zone.  |

| Symptoms                                      | Check points   | Remedy   |
|---|--|--|
| No operation during the heating being in use. | Is the cookware empty or the temperature too high?   | Please check whether the appliance is being misused.   |
|   | Is the air intake/exhaust vent clogged or dirt has accumulated?  | Remove the stuff clogging the air intake/exhaust vent. Operate the appliance again after cooling down. |
|   | Is the cooker working over 2 hours without any external instruction?   | Reset cooking modes or use timer function.   |
| Error codes occur                             | E0 The fan short circuit<br>E1 The fan disconnect<br>E2 Sensor of PCB overheat<br>E3 Over-voltage<br>E4 Under-Voltage<br>E5 Thermocouple disconnect /short circuit<br>E6 Sensor of PCB disconnect /short circuit<br>E7 Thermocouple overheat |  |

If the above remedies/controls can not fix the problem, unplug the appliance immediately, contact Service Centre for inspection and repairing, note the error code and report it to Service Centre Ltd. To avoid any danger and damage to the appliance, do not disassemble or repair it by yourself.

## 6. Product Specifications

|                 |                    |
|-----------------|--------------------|
| Model           | HC-D2KW            |
| Rated Voltage   | 220-240V~50Hz/60Hz |
| Power           | 2000W              |
| Unit Dimensions | 355*310*60mm       |