

HESSTAR


ELECTRIC OVEN

HEO-46CR



INSTRUCTION MANUAL

Please read this manual carefully.
To keep this manual in the place accessible by a user at any time.

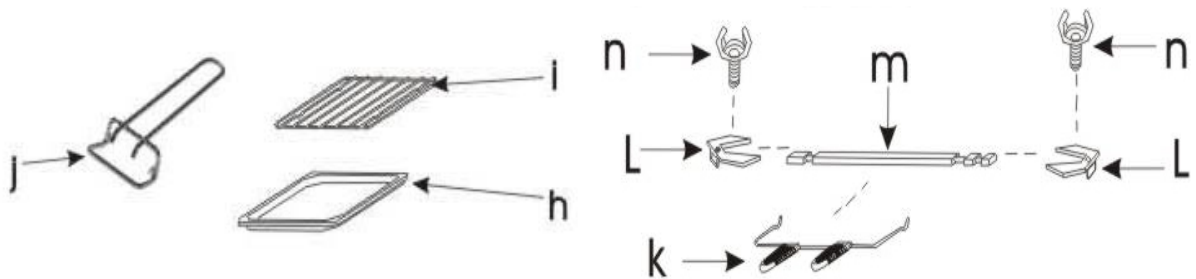

- a. Time control knob
- b. Indicator light
- c. Heater switch knob(7 stages)
- d. Thermostat switch knob
- e. Housing
- f. Door handle
- g. Door glass
- h. Bake tray
- i. Wire rack
- j. Tong
- k. Rotisserie handle
- L. Butterfly skewer
- m. Rotisserie bar
- n. Thumbscrews

7 stages heater switch control:

stage 1—OFF; stage 2—TOP HEATING; stage 3—BOTTOM HEATING; stage 4—TOP&BOTTOM HEATING; stage 5—ROTISSERIE FUNCTION WITH TOP&BOTTOM HEATING; stage 6—CONVECTION FUNCTION WITH TOP&BOTTOM HEATING; stage 7—ROTISSERIE&CONVECTION FUNCTION WITH TOP&BOTTOM HEATING;

IMPORTANT SAFEGUARDS:

1. When using this electric oven, basic precautions should always be followed, including the following:
2. Read all instructions.
3. Do not touch hot surface, Use handles or knobs.
4. Close supervision is necessary when any appliance is used by or near children.
5. To protect against electric shock, do not immerse cord, plug or any parts of the oven in water or other liquids.
6. Do not let cord hang over edge of table or counter, or touch hot surfaces.
7. Do not operate appliances with damaged cord or plug or after the appliances Malfunctions, or has been damaged in any manner. Return appliances to the nearest Authorized Service Center for examination, repair, or adjustment.
8. The use of accessory attachments not recommended may cause hazard or injury.
9. Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
10. When operating the oven keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
11. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
12. To disconnect, turn the control to OFF, then remove the plug, Always hold the Plug, but never pull the cord.
13. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
14. Do not cover any part of the oven with metal foil.
15. Use extreme caution when removing tray or disposing of hot grease or other hot liquids.
16. Do not clean with metal scouring pads pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
17. Never leave the appliances unattended while broiling or toasting.
18. Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
19. A fire may cause if the oven is covered or touching inflammable material, including curtains draperies, walls and like, when on operation. Do not store any item on the oven during operation.
20. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
21. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
22. Do not store any materials, other than recommended accessories in this oven.
23. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
24. This appliance is for HOUSEHOLD USE ONLY. Do not use outdoors.
25. Do not use appliance for other than intended use.

OPERATION INSTRUCTIONS

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY

Before using your oven for the first time

Be sure to:

1. Make sure that the oven is unplugged and the TIMER switch is in the "OFF" position
2. Remove all rack and pans and wash them in hot sudsy water or in the dishwasher.
3. Thoroughly dry all accessories and re-assemble in oven. Plug oven into outlet and you are ready to use your new oven.
4. After re-assembling your oven, we recommend that you run it at the max temperature for approximately 15 minutes to eliminate any packing oil that may remain after cleaning.

USING YOUR OVEN

 
HELPFUL HINTS

Do not worry about the smoke for the first operating, as it is normally for the first heating, and will disappear within 20 mins. In general, it is not necessary to preheat the oven, But you may better results if you heat the oven before cooking some delicate meals, such as rare medium meat and cakes.


HOW TO USE THE ROTISSERIE FUNCTION

1. Set the thermostat control to max.
2. Insert the pointed end of SPIT through skewer, making sure the points of skewer face in the same direction as pointed end of the spit. Slide towards square of the spit and secure with thumbscrew.
3. Place food to be cooked on the spit by running the spit directly through the center of the food.
4. Place the second skewer into the other end of the roast of poultry and secure skewer with the thumbscrew.
5. Check the food is centered on the SPIT.
6. Insert the point end of the spit into the DRIVE SOCKET. Make sure the square end of the spit rests on the spit support.
7. Turn the time control to the desired cooking time.
8. When complete, turn the TIME control to the OFF position.
9. Remove the spit by placing side the hooks of the rotisserie handle under the grooves on either side of the spit, Lift the left side of the spit first by lifting it up and out, Then pull the spit out of the drive socket and carefully remove the roast from the oven take the meat off the of the spit and place on cutting board or platter.


HOW TO BAKE

1. Place the removable rack into the desired position.
2. Place the bake pan on the wire rack. Shut the oven door.
3. Turn the timer dial to the desired cooking time.
4. Turn the heater switch dial on the position. 
5. Turn the thermostat dial for the desired temperature.
6. When finished baking, turn the time dial till position "Off" to switch off the oven.

HOW TO BROIL

1. Insert the removable wire rack with food and the all-purpose pan.
2. Keep the door half-open.
3. Turn the heater switch dial on the position. 
4. Turn the thermostat dial to the desired broiling time.
5. When finish broiling, turn the timer dial till position "Off" to switch off the oven.

HOW TO TOAST

1. Set the temperature control to 250
2. Turn the heater switch dial on the position. 
3. Place food to be toasted on the Wire Rack.
4. Turn the Time Control to desired darkness. Bell will ring to signal the end of the Toast cycle.

HOW TO USE CONVECTION FUNCTION

The convection function acts with top&bottom heaters, when you choose the heater switch at the stage 6 or stage 7, then the convection motor will start working.

CLEANING

1. It is important that you clean the appliance after each use to prevent an accumulation of grease and avoid unpleasant odors.
2. Allow the appliance to cool and unplug from outlet before cleaning.
3. Do not immerse appliance in water or wash it under waterspout.
4. Removable wire rack, bake pan, crumb tray can be washed, as normal kitchenware.
5. Clean outside of appliance with a damp sponge.
6. Do not use abrasive cleaners or sharp utensils to clean the oven, as scratching may weaker it and cause shattering.
7. Let all parts and surfaces dry thoroughly prior to plugging oven in and using.

SAFETY NOTICE:

KEEP OUT OF CHILDREN REACH AND THERE IS ALWAYS ATTENDED BY AN ADULT WHILE OPERATING THE OVEN.