

HESSTAR

 
 
Electric Oven

HEO-770S



Instruction Manual

Please read the instruction completely before using the appliance.

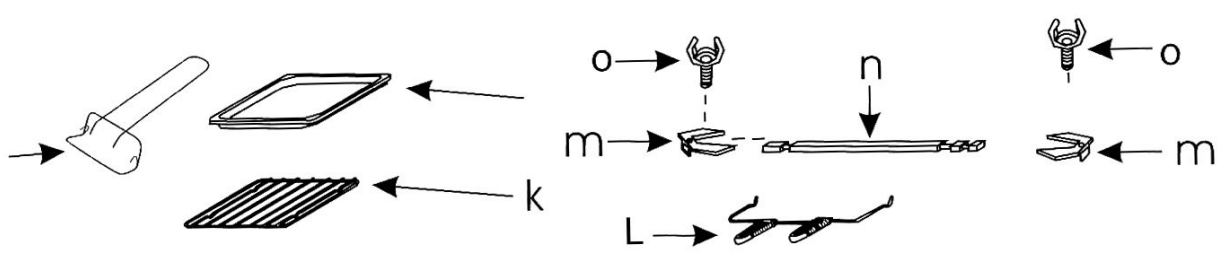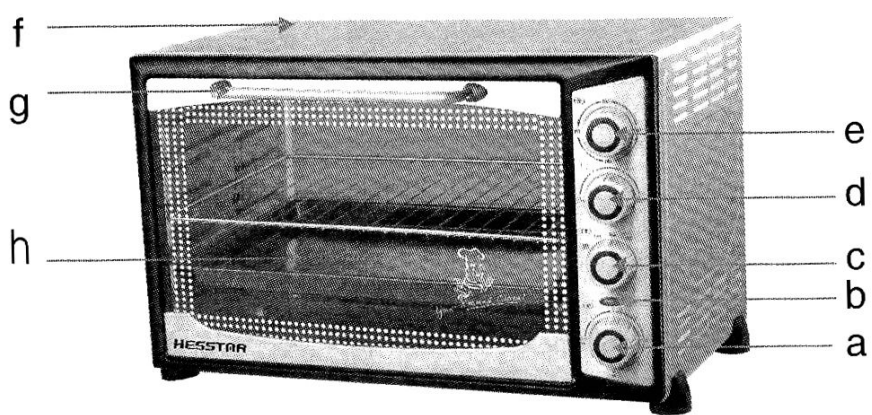 


- a. Time control knob
- b. Power Indicator light
- c. Heater switch knob
- d. Temperature switch knob
- e. Function control knob
- f. Housing
- g. Door handle
- h. Door glass

- i. Tong
- Bake tray
- k. Wire rack
- L. Rotisserie handle
- m. Butterfly skewer
- n. Rotisserie bar
- o. Thumbscrews



Interior light works with TIMER.

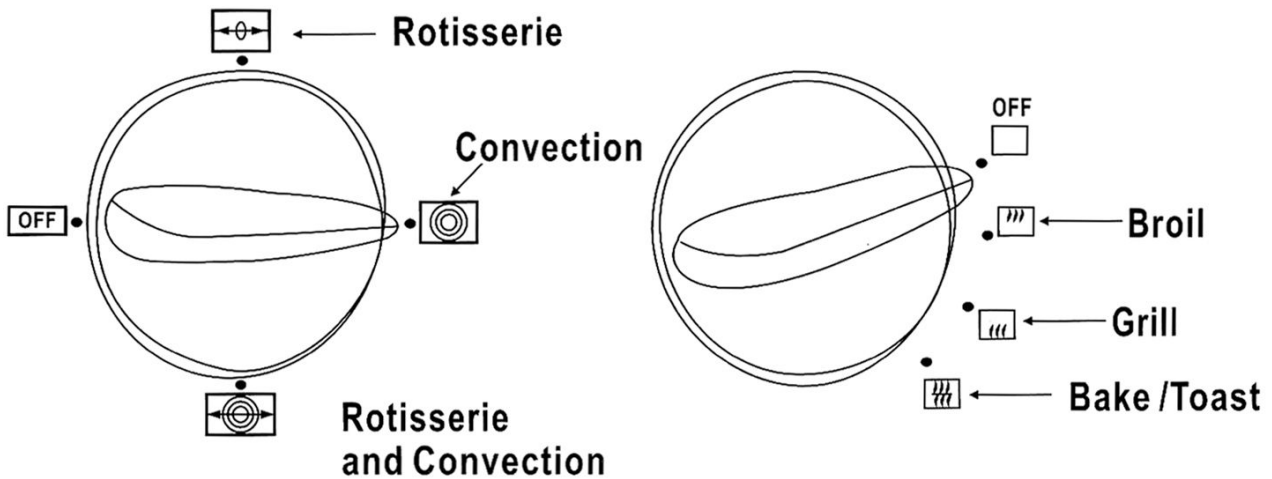

Function control

IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed, including the following:

- 1 Read all instructions.
2. Do not touch hot surfaces, Use handles or knobs.
3. Close supervision is necessary when any appliances is used by or near children.
4. To protect against electric shock, do not immerse cord,plug, or any parts of the oven in water or other liquids.
5. Do not let cord hang over edge of table or counter or touch hot surfaces.
6. Do not operate appliances with damaged cord or plug or after the appliances malfunctions, or has been damaged in any manner Return appliances to the nearest Authorized Service Center for examination, repair,or adjustment.
- 7 The use of accessory attachments not recommended may cause hazard or injury.
8. Do not place on or near a hot gas or electric burner ,or in a heated oven or in a microwave oven
9. When operating the oven keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
10. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.

- 11 To disconnect, turn the control to OFF then remove the plug, Always hold the plug, but never pull the cord.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. Do not cover any part of the oven with metal foil.
14. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
15. Never leave the appliances unattended while broiling or toasting.
16. Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- 17 A fire may cause if the oven is covered or touching inflammable material, including curtains draperies, walls. And like, when on operation. Do not store any item on the oven during operation.
18. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
19. Do not place any of the following materials in the oven: cardboard, plastic, paper or anything similar
20. Do not store any materials, other than recommended accessories, in this oven when not in use.
- 21 Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
22. Do not use outdoors.
23. Do not use appliance for other than intended use.
24. This appliance is for HOUSEHOLD USE ONLY

OPERATION INSTRUCTIONS

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY BEFORE USING YOUR ROTISSERIE & CONVECTION OVEN

Before using your oven for the first time

Be sure to:

1. Make sure that the oven is unplugged and the TIMER switch is in the “ OFF ” position.
2. Remove all racks and pans and wash them in hot sudsy water or in the dishwasher
3. Thoroughly dry all accessories and re-assemble in oven. Plug oven into outlet and you are ready to use your new oven.
4. After re-assembling your oven We recommend that you run it at the MAX temperature for approximately 15 minutes to eliminate any packing oil that may remain after shipping.

USING YOUR ROTISSERIE OVEN

HELPFUL HINTS

In general, it is not necessary to preheat the oven, But you may have better results if you heat the oven before cooking some delicate meals, such as rare medium meat and cakes.

 

HOW TO BAKE

1. Place the removable rack into the desired position.
2. Place the bake pan on the wire rack. Shut the oven door
3. Turn the timer dial to the desired cooking time.
4. Turn the selector dial on the BAKE position.
5. Turn the thermostat dial for the desired temperature.
6. When finished baking turn the time dial till position “0” ,to switch off the oven.



HOW TO BROIL

1. Insert the removable wire rack with food and the all-purpose pan.
2. Keep the door half-open.
3. Turn the selector dial to the position BROIL.
4. Turn the thermostat dial to the desired broiling time
5. When finish broiling, turn the timer dial till position “ 0 ” to switch off the oven.

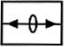HOW TO USE THE ROTISSERIE FUNCTION

1. Set the thermostat control to max.
2. Set the function control to. Rotisserie( Insert the pointed end of SPIT through skewer, making sure the points of skewer face in the same direction as Pointed end of the spit. Slide skewer towards square of the spit and secure with thumbscrew.
3. Place food to be cooked on the spit by running the spit directly through the Center of the food.
4. Place the second skewer into the other end of the roast of poultry and secure skewer with the thumbscrew.
5. Check the food is centered on the SPIT
6. Insert the point end of the spit into the DRIVE SOCKET make sure the square end of the spit rests on the spit support.
7. Turn the time control to the desired cooking time.
8. When complete, turn the TIME control to the OFF position.
9. Remove the spit by placing the hooks of the rotisserie handle under the grooves on either side of the spit ,Lift the left side of the spit first by lifting it up and out, Then pull the spit out of the drive socket and carefully remove the roast from the oven, take the meat off of the spit and place on cutting board or platter
10. If you need convection function at the same time, please set the function control to rotisserie and convection(

HOW TO USE THE CONVECT ON FUNCT ON

- 1 Set the function knob to convection function and rotisserie function( if you need convection function and rotisserie function at the same time.
2. Set the function knob to convection function( if you need convection function only.

TOASTING

- 1 Set the Temperature Control to 250.
2. Turn the Function Control to Toast.
3. Place food to be toasted on the Bake Rack.
4. Ensure Crumb Tray is in place.
5. Turn the Time Control to desired darkness.
6. Bell will ring to signal the end of the Toast cycle.

CLEANING

- 1 It is important that you clean the entire appliance after each use to prevent an accumulation of grease and avoid unpleasant odors.
2. Allow the appliance to cool and unplug from outlet before cleaning.
3. Do not immerse appliance in water or wash it under water-spout.
4. Removable wire rack, bake pan, crumb tray can be washed, as normal kitchenware.
5. Clean outside of appliance with a damp sponge.
6. Do not use abrasive cleaners or sharp utensils to clean the oven ,as scratching may weaker it and cause shattering.
- 7 Let all parts and surfaces dry thoroughly prior to plugging oven in and using.