 


# **HESSTAR**

## **VACUUM CLEANER**

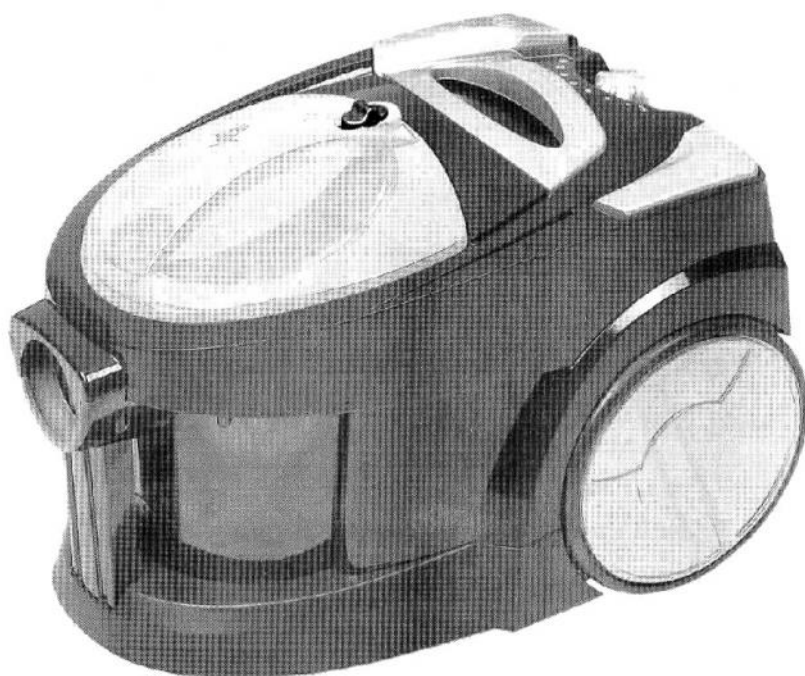

### **HVC-916**

## **INSTRUCTION MANUAL**

## Specification

Model: HVC-916

 
Voltage: 220-240V~

Frequency: 50Hz

Power: 1600 W

Collection Capacity: 3.5L

## Description of Parts

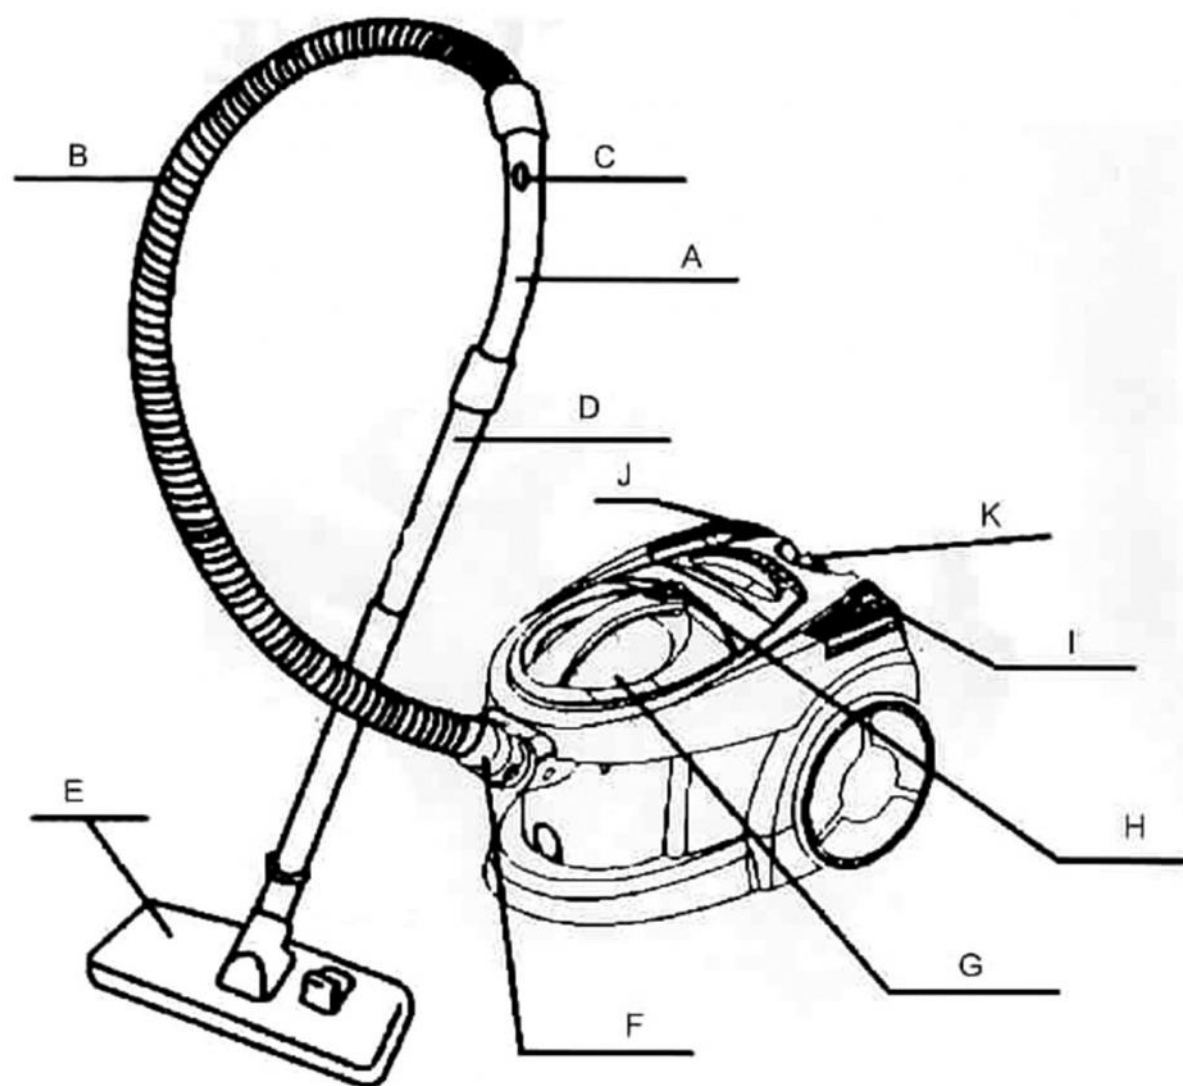

- A. Handle
- B. Hose
- C. Wind-force adjuster
- D. Extension tube
- E. Floor brush
- F. House connector

- G. Dust bin
- H. Carrying handle
- I. Power switch
- J. Cable rewind button
- K. Speed controller

## IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using domestic electrical products to reduce the risk of electric shock, personal injury or fire. It is important to keep these instructions for future reference after you have read and understood them and before attempting to use this product.

- Read the operating instructions carefully before putting the appliance into operation and keep the instructions and if possible, the box with the internal packing.
- The appliance is designed exclusively for private use and for the envisaged purpose. This appliance is not fit for commercial use. Do not use it outdoors (except if it is designed to be used outdoors). Keep it away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges. Do not use the appliance with wet hands. If the appliance is humid or wet, unplug it immediately. Do not put it in water.
- When cleaning or putting it away, switch off the appliance and always pull out the plug from the socket (pull on the plug and not by the cable) if the appliance is not being used and remove the attached accessories.
- Do not operate the machine without supervision. If you should leave the room, always switch the machine off and remove the plug from the socket.
- To protect children from the dangers posed by electrical appliances, make sure that the cable is hanging low and that children do not have access to the appliance.
- Check the appliance and the cable for any damages on a regular basis. Do not use the appliance if it is damaged.
- Do not try to repair the appliance on your own. Always contact an authorized technician. To avoid the exposure to danger, always have a faulty cable replaced by a qualified person and with a cable of the same type.
- When cleaning stairs always clean from the bottom to the top. Never operate the unit with the unit above head height.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## **Reminders**

- Do not vacuum any form of liquids.
- Do not vacuum hot ashes, pointed or sharp objects as this may damage the filter.
- Do not use the appliance in humid rooms.
- Never use without the filter. Check if the filter is inserted correctly. Keep hair, clothing and body parts away from the vacuum nozzle during use.
- Keep the vacuum cleaner away from sources of heat like radiators, ovens, etc.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Do not block the exhaust outlet as this will cause the motor to overheat.

## **Cleaning and Storage**

### **Cleaning**

- Unplug the unit before cleaning.
- Clean the casing with a dry cloth.
- Clean the motor protection filter approximately every 10th time it is emptied, or more often if necessary.
- Clean the filter with hot water without any additives. Put it back into place once it is completely dry.

### **Storage**

- Store at Room temperature to avoid condensation build up.
- Rewind the cable completely.
- Insert the hook of the nozzle at the back of the device into the storage aid.

Do not remove this plug from the socket by pulling the cable or the appliance itself.



Do not run the appliance over the power cable.



Do not use the appliance to vacuum lighted matches, cigarette ends or hot ash



Do not use the appliance on wet surfaces



Do not obstruct the air intake or outlet vents



 
Do not use the appliance to vacuum needles, drawing-pins or string cement, plaster, or other material for construction and decoration



## Assembling the vacuum cleaner

### Removing the flexible tube

Remove the plug from the power socket.  
To release the flexible tube, press the button on the end of the tube and pull the tube firmly from the air intake duct

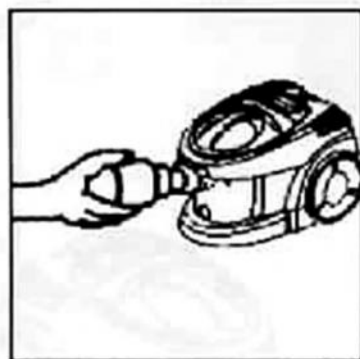

## Fitting the extension tubes and accessories

Fitting the extension tube to the handle



Fitting the extension tubes

 


Fitting the accessories to the extension tube



## Instruction for use

1. Before using the appliance unwind length of cable and insert the plug into the power socket. A YELLOW mark on the power cable shows the ideal cable length. Do not extend the cable beyond the RED mark.
2. To rewind the power cable, press the rewind button with one hand, and guide the other hand to ensure that it does not whip causing damage.
3. Press the ON/OFF button to switch the appliance on. It is advisable to set the electronic power regulator to MIN before switching the appliance on.
4. By turning the speed control knob the absorption power can be adjusted.
5. The safety valve will open automatically when dust inside dust bin reaches the maximum quantity.

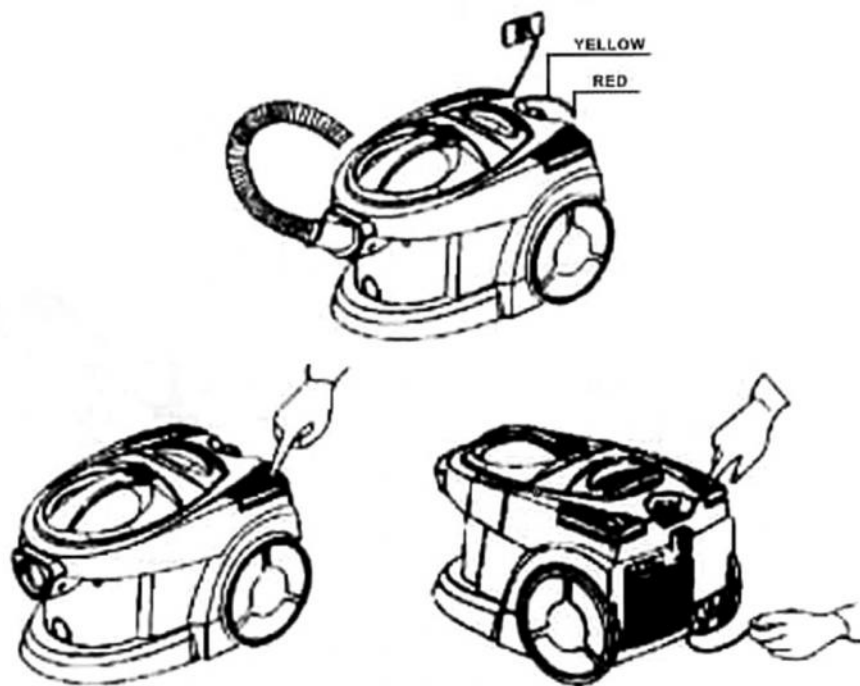


## Using the cleaning accessories

### Dual-position carpet/floor brush

Pos.1: bristles extended, for hard floors




 Pos.2: bristles retracted, for carpets

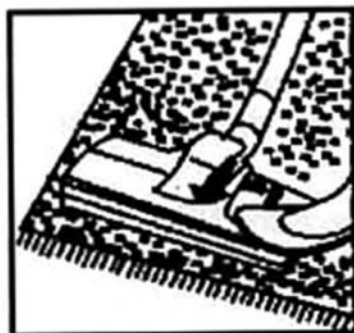


### Narrow nozzle

 for cleaning radiators, corners, edges, drawers etc.



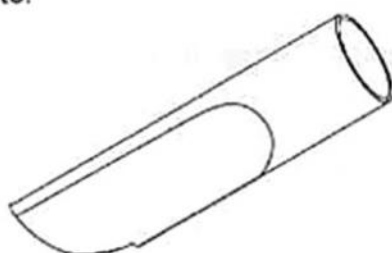


 for cleaning curtains, shelves, books, inlaid furniture lamps and other delicate objects

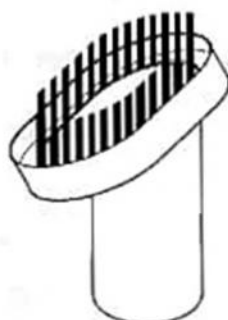


## Cleaning the dust bin

   1. Lift the front cover and take out the dust bin.
2. Press the release button to open the lid of bin.
3. Take out the hepa filter from dust bin.
4. Remove dust from inside the dust bin.

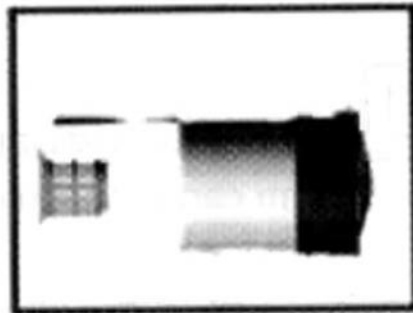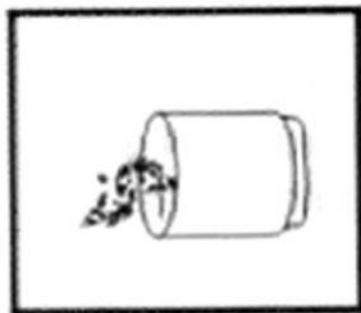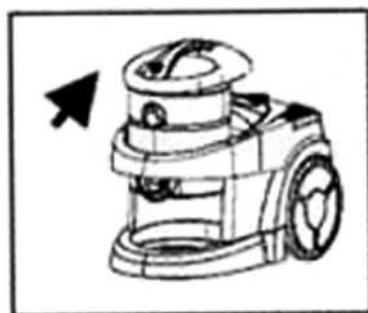

## Cleaning the hepa filter

 1. Take out the filter from dust bin.
2. Clean it with hot water and let it dry naturally before next use.

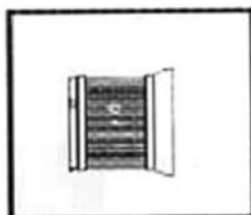



The wires in the mains lead are coloured in accordance with the following code:

BROWN	LIVE (L)
BLUE	NEUTRAL (N)


As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The BLUE wire is the NEUTRAL and must be connected to the terminal which is marked with the letter N or coloured BLACK
- The BROWN wire is the LIVE and must be connected to the terminal that is marked with the letter L or coloured RED.
- No connection is to be made to the earth terminal of the plug.

Always ensure that the cord grip is positioned and securely fastened.

If a 13A (BS1363) fused plug is used it must be fitted with a BS1362 13A fuse. If in doubt consult a qualified electrician.

#### WIRING FOR A UK 13AMP PLUG

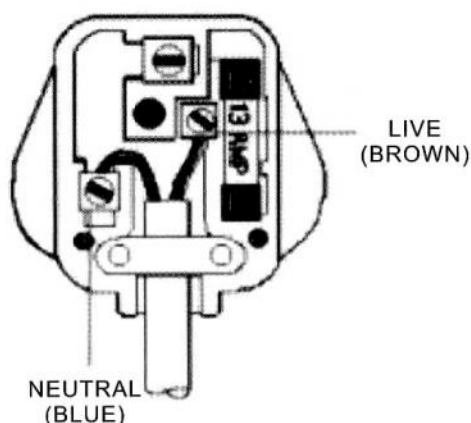 


This symbol indicates that this unit is a Class II appliance and therefore an earth connection is not required.

#### Information on Waste Recycling



 Electronic products should not be put together with household waste for disposal. Please recycle them accordingly and also you may contact your local authorities on how to properly dispose the product.

B&M L24 8RJ

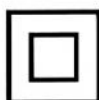

Recyclable  
Outer Packaging

