


HesStar

Operator's manual

DISINFECT WASHING MACHINE

HW-05S

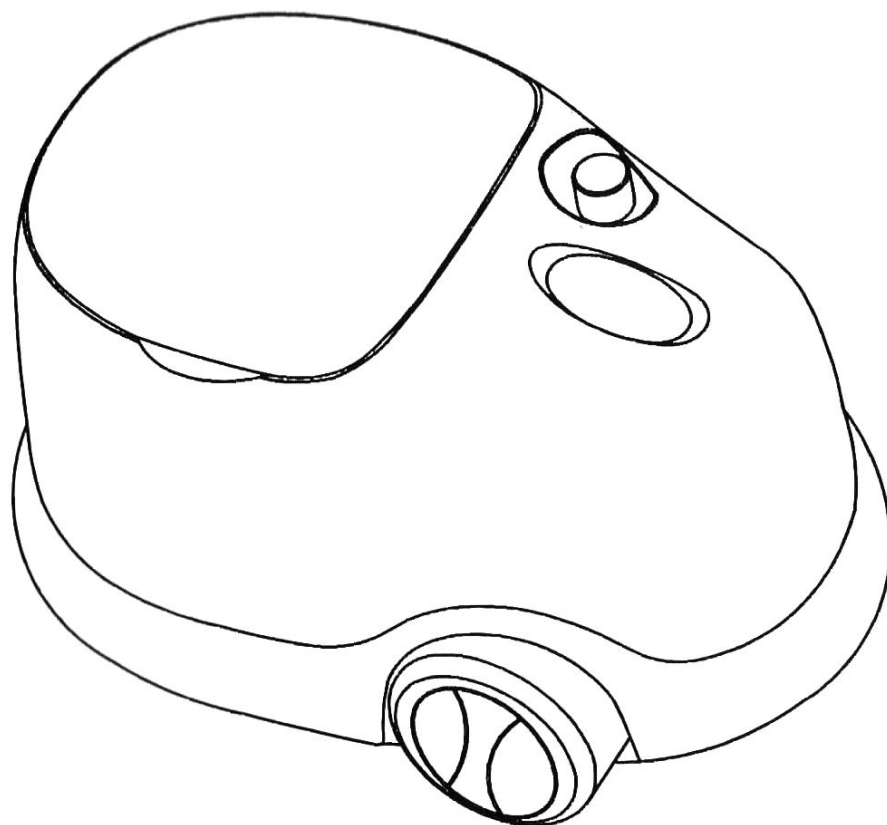

Features

This mini washer has a cute design with a rounded shape that will fascinate anyone.


With plastic design the body will not get rusty. It is safe and reliable.

This mini washer has a disinfecting function that kills bacteria that cause illness, it is suitable for washing baby's clothing.


It can be placed anywhere because it occupies a small space and is convenient to use.

Specification

Rated voltage	240V~	Rated frequency	50Hz
Rated input power	90W	Rated water volume (High water level)	4L
Rated wash capacity	0.5kg	Net weight	6kg
Dimension (WxDxH)	280mmX420mmX300mm		

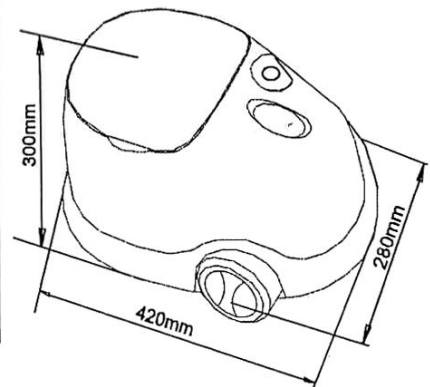


Name of all parts

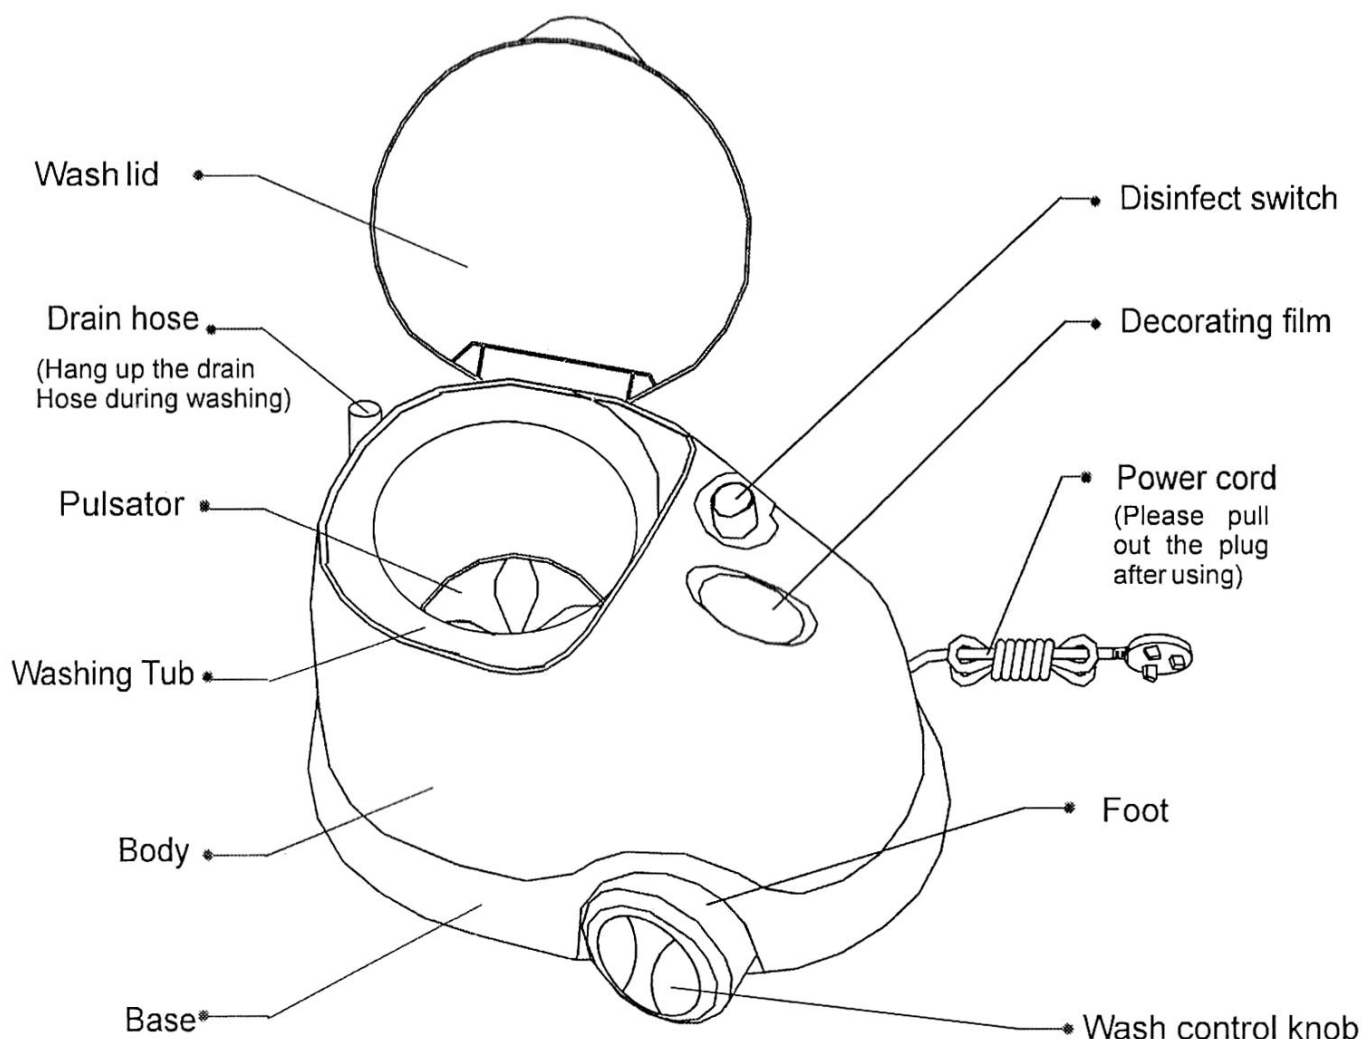


Installation

Place the Washing Machine on a Firm and Level Surface

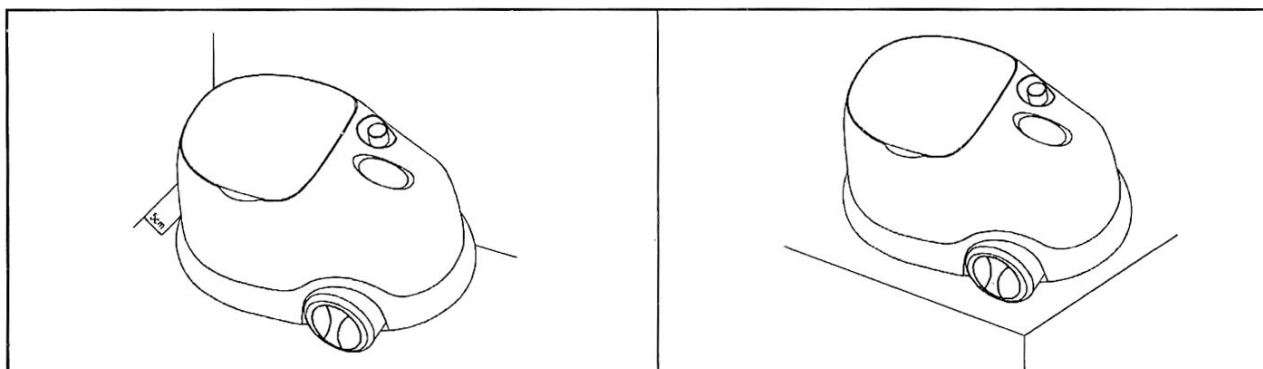


Operation


1. Plug in the power cord.

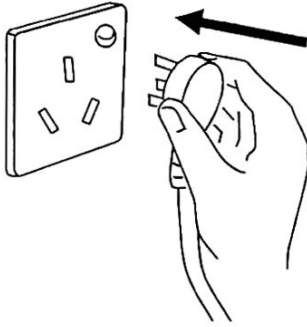

2. Hang up the drain hose and place the clothes into the washing tub, then pour water into the tub.
(Note: Distance between the highest water level and inside lid should be more than 50mm.)

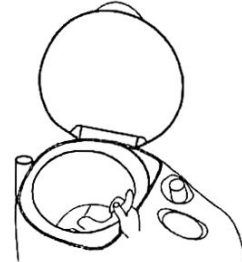


3. Add suitable detergent according to the wash load volume as recommended on the detergent box.

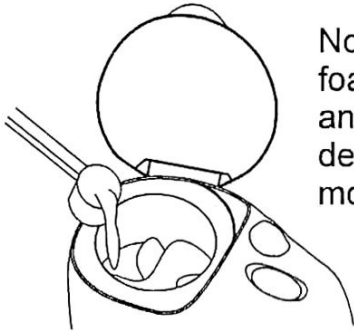


Note: Please use low foam powder detergent, and the weight of detergent should not be more than 8 gram.

4. Turn the washer control knob to a desire time, and close the water lid. It will start washing.

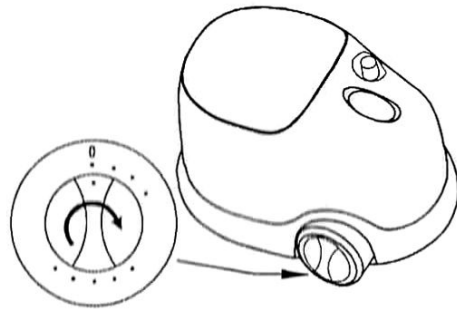


5. If disinfecting is needed, please press the disinfecting switch. To stop disinfecting, press again the switch.







Note: Disinfecting should be used after the clothes have been rinse. This is to avoid excessive foam.

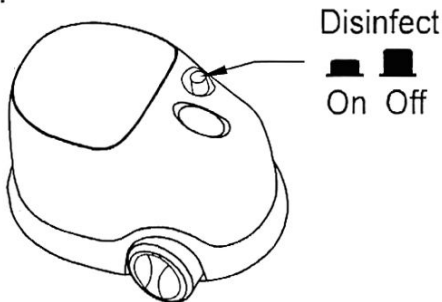

6. Lay down the drain hose after washing.

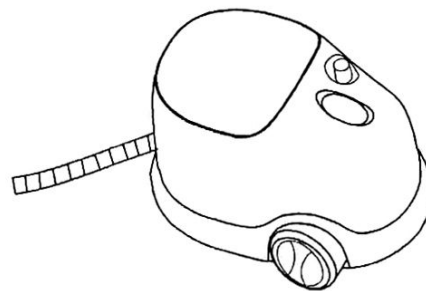

Safety Warning
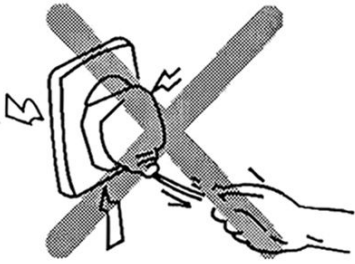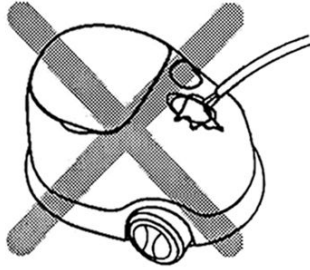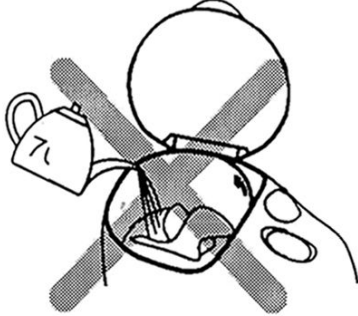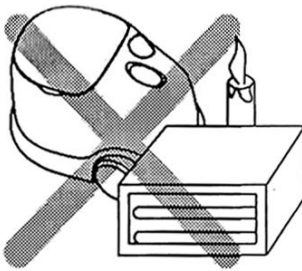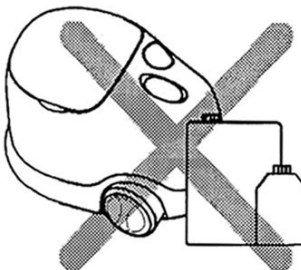
<p>■ Do not pull the cord when you want to unplug.</p>  <p>Danger!</p>	<p>■ Do not pour water on the washing machine.</p>  <p>Danger!</p>	<p>■ Do not add hot water into the washing tub.</p>  <p>Warning!</p>
<p>■ Keep the fire and heat source away from the washing machine.</p>  <p>Warning!</p>	<p>■ Do not clean the washer body with volatile solvent such as petrol and methane. Also, do not pour these solvents into the tub for washing or drying purposes.</p>  <p>Warning!</p>	<p>■ Do not expose the washer to direct sunlight or rain.</p>  <p>Note!</p>

Note:




- 1 For safety purpose, unplug the power cord after washing.
- 2: Please do not use high foam wash powder
- 3: Please do not press the disinfect switch when there is no water in the washing tub.

Maintenance

- Clean the surface of the washing machine with a soft cloth regularly.
- Clean the inner tub regularly, especially after washing starched or bleached laundry.
- The lint should be removed regularly.



Troubleshooting

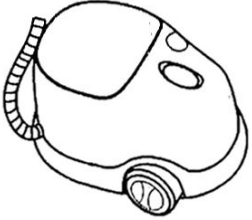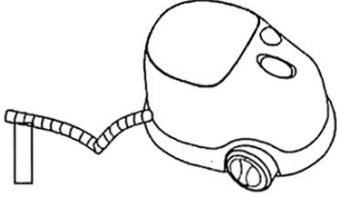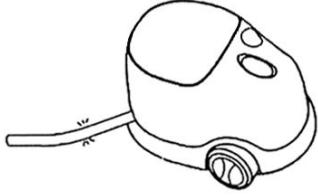Trouble	Checkist		
Unable to drain	 <p data-bbox="344 1391 635 1464">Is the drain hose put down properly?</p>	 <p data-bbox="663 1391 1011 1547">Is the drain hose being blocked or supporting object for the drain hose too high?</p>	 <p data-bbox="1083 1391 1437 1464">Is there any ice formed in the drain hose?</p>

Note

Switch off the electric power immediately if there is any abnormal noise or abnormal smell

Electrical Diagram

