

HESSTAR

ELECTRIC OVEN

HEO-CR80

HEO-CR120



INSTRUCTION MANUAL

Please read this manual carefully.
To keep this manual in the place accessible by a user at any time.

NAME OF PARTS:



a. Time control knob

b. Heater switch knob

c. Thermostat switch knob

d. Function control knob (Rotisserie/Convection)

e. Housing

f. Door handle

g. Door glass

o. Indicator light

h. Bake tray

i. Wire rack

j. Tong

k. Rotisserie handle

L. Butterfly skewer

m. Rotisserie bar

n. Thumbscrews



P.

Interior light works with TIMER.

Important Safeguard:

When using electrical appliances, basic precautions should always be followed.

Do include the below:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. Close supervision is necessary when any appliances are used by or near children.
4. To protect against electric shock, do not immerse cord, plug, or any parts of the oven in water or other liquid.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliances with damaged cord or plug or after the appliances malfunctions, or has been damaged in any manner. Return appliances to the nearest Authorized Service Center for examination, repair, or adjustment.
7. The use of accessory attachments not recommended may cause hazard or injury.
8. Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
9. When operating the oven keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
10. Unplug from outlet when not in use and before cleaning. Allow cooling before putting on or taking off parts and before cleaning.
11. To disconnect, turn the control to OFF, then remove the plug. Always hold the plug, but never pull the cord.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. Do not cover any part of the oven with metal foil.
14. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
15. Never leave the appliances unattended while broiling or toasting.
16. Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
17. May cause a fire if the oven is covered or touches inflammable material. Include curtains draperies, walls. And like, when on operation. Do not store any item on the oven during operation.
18. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
19. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
20. Do not store any materials, other than recommended accessories in this oven when oven is hot.
21. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
22. Do not use outdoors.
23. Do not use appliance for other than intended use.

OPERATION INSTRUCTIONS

BEFORE USING YOUR ROTISSERIE & CONVECTION OVEN

Before using your oven for the first time, be sure to:

1. Make sure that the oven is unplugged and the TIMER switch is in the "OFF" position
2. Remove all rack and pans and wash them in hot sudsy water or in the dishwasher.
3. Thoroughly dry all accessories and re-assemble in oven. Plug oven into outlet and you are ready to use your new oven.
4. After re-assembling your oven, we recommend that you run it at the MAX temperature for approximately 15 minutes to eliminate any packing oil that may remain after shipping.

HELPFUL HINTS

Do not worry about the smoke for the first operation. It is normal for the first heating, and will disappear within 20 minutes. In general, it is not necessary to preheat the oven, But you may get better results if you heat the oven before cooking some delicate meals, such as rare medium meat and cakes.

HOW TO USE THE ROTISSERIE FUNCTION

1. Set the thermostat control to max.
2. Set the function control to Rotisserie. Insert the pointed end of SPIT through skewer, making sure the points of skewer face in the same direction as pointed end of the spit. Slide towards square of the spit and secure with thumbscrew.
3. Place food to be cooked on the spit by running the spit directly through the Center of the food.
4. Place the second skewer into the other end of the roast of poultry and secure skewer with the thumbscrew.
5. Check the food is centered on the SPIT.
6. Insert the point end of the spit it into the DRIVE SOCKET make sure the square end of the spit rests on the spit support.
7. Turn the time control to the desired cooking time.
8. When complete, turn the TIME control to the OFF position.
9. Remove the spit by placing side the hooks of the rotisserie handle under the grooves on either side of the spit, Lift the left side of the spit first by lifting it up and out, Then pull the spit out of the drive socket and carefully remove the roast from the oven take the meat off the of the spit and place on cutting board or platter.
10. If you need convection function at the same time, please set the function control to rotisserie and convection.


SAFETY NOTICE:

KEEP OUT OF CHILDREN REACH. MAKE SURE THERE IS ALWAYS AN ADULT ATTENDANCE WHILE OPERATING THE OVEN.


HOW TO USE THE CONVECTION FUNCTION

1. Set the function knob to convection function and rotisserie function if you need convection function at the same time.
2. Set the function knob to convection function if you need convection function only.

 
HOW TO BAKE

1. Place the removable rack into the desired position.
2. Place the bake pan on the wire rack. Shut the oven door.
3. Turn the timer dial to the desired cooking time.
4. Turn the heater switch dial on the second position , use TOP HEATING.
5. Turn the thermostat dial for the desired temperature.
6. When finished baking, turn the time dial till position "Off" to switch off the oven.

HOW TO BROIL

1. Insert the removable wire rack with food and the all-purpose pan.
2. Keep the door half-open.
3. Turn the heater switch dial on the third position , use BOTTOM HEATING.
4. Turn the thermostat dial to the desired broiling time.
5. When finish broiling, turn the timer dial till position "Off" to switch off the oven.

HOW TO TOAST

1. Set the temperature control to 250
2. Turn the heater switch dial on the fourth position , use TOP&BOTTOM HEATING.
3. Place food to be toasted on the Wire Rack.
4. Turn the Time Control to desired darkness. Bell will ring to signal the end of the Toast cycle.

CLEANING

1. It is important that you clean the appliance after each use to prevent an accumulation of grease and avoid unpleasant odors.
2. Allow the appliance to cool and unplug from outlet before cleaning.
3. Do not immerse appliance in water or wash it under waterspout.
4. Removable wire rack, bake pan, crumb tray can be washed, as normal kitchenware.
5. Clean outside of appliance with a damp sponge.
6. Do not use abrasive cleaners or sharp utensils to clean the oven, as scratching may weaken it and cause shattering.
7. Let all parts and surfaces dry thoroughly prior to plugging oven in and using.