 


HESSTAR

Model: HTP-39MC

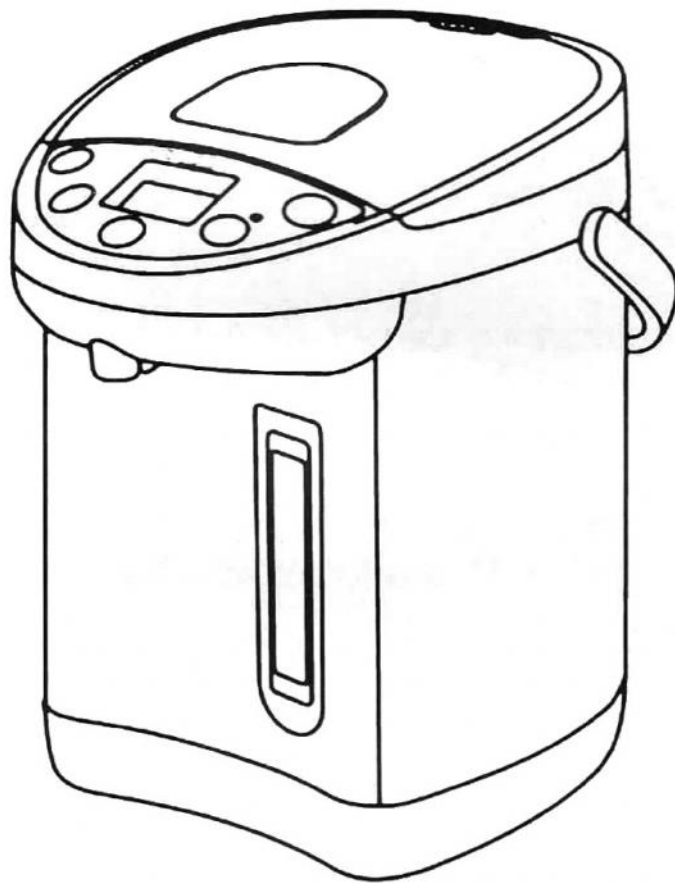

Electric Thermal pot

Instruction Manual

FOR HOUSEHOLD USE ONLY


Please read these instruction carefully before using

Please read all instructions before use.


Safety Precautions

- 1 Always unplug appliance from the power supply before cleaning or when it is not in use.
2. Always attach the power cord to the appliance BEFORE you plug it into the power socket. To disconnect appliance, always switch off power before removing the power cord from the appliance.
3. Close supervision is necessary when operating appliance near children, Ensure the power cord does not hang over on work surface.
4. Do not operate appliance with damaged cord set, All repairs should always be done by an authorized service centre.
5. Always place appliance on a flat sturdy surface.
Do not touch hot surface when moving the appliance.
6. Do not immerse appliance or electrical parts into water or any other liquids.
- 7 Use of non original accessories may cause damage or malfunctioning to your appliance.
8. This appliance is for household use only.

Parts Identification

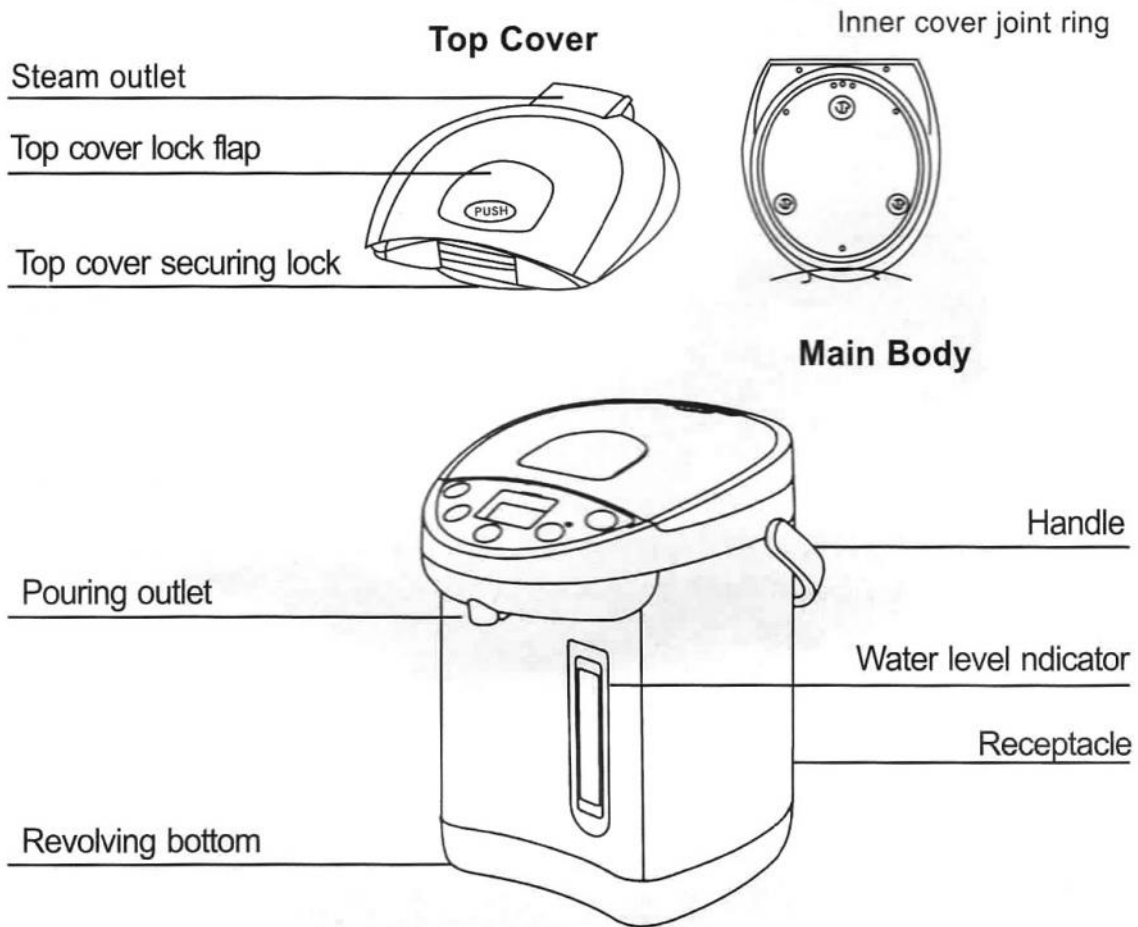

Control Panel

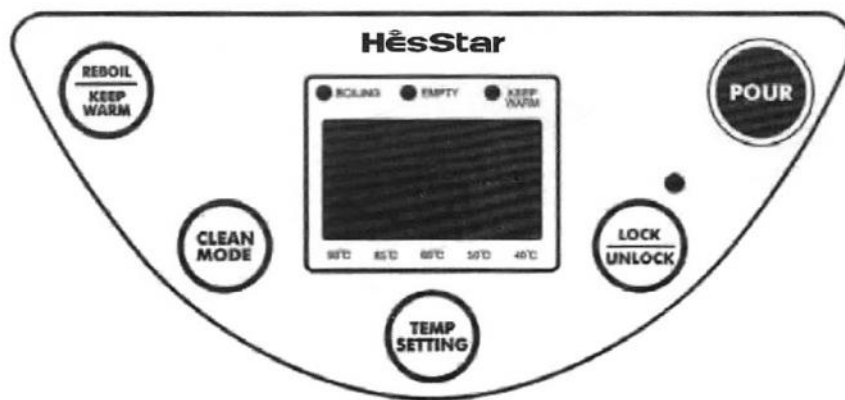


Specifications

| | |
|---------------|-----------------|
| Model | HTP-39MC |
| Rated Voltage | 220-240 V |
| Rated Power | 650-780 W |
| Frequency | 50 Hz |
| Capacity | 3.8 L |

How To Use Your Thermal Pot


Opening Top Lid

Push down front edge of TOP COVER LOCK FLAP located at the lid. Lift up back portion pulling and upwards to open the top cover. Watch out on hot vapor.

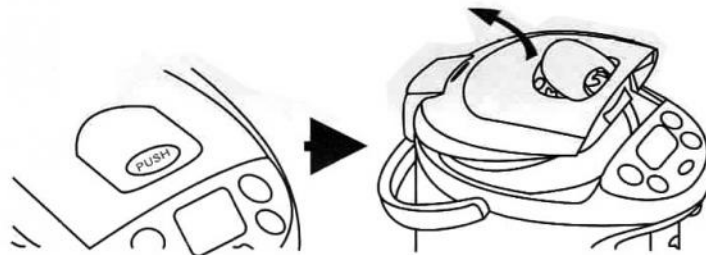

Removing Top Lid

Lift top lid to about 45° angle, press the UNLOCK button located at the rear of the top cover and pull upwards at 45°.

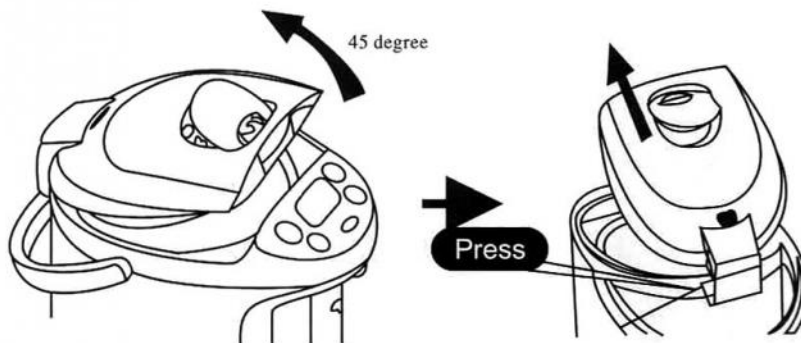

Water Filling & Refilling

Open the Top Cover fill water into the Inner pot until the FULL mark is reached. Do not over fill as hot water may splash out during boiling.

Close top cover, ensure lid is secured and “click” sound is heard.

Water Boiling

When power is ON, water will commence to boil immediately The LCD display will show the temperature rising

- Do not open top cover when water is boiling
- Do not add water when appliance is still boiling.
- Do not obstruct the top lid steam outlet.
- Be cautious as steam emitting from steam vent is hot

Keeping Warm

You can set the KEEP WARM temperature from 5 selections.

A Beeper will sound 5 times when water is boiled at 100°C The Keep Warm LED (*green light*) will come ON and temperature will start to drop until the required KEEP WARM temperature is reached.

Setting the KEEP WARM Temperature

Press the “TEMP SETTING” button until your ideal temperature is shown on the LCD display by an inverted triangle.

You may select from FIVE temperature settings - 98°C, 85°C, 60°C, 50°C or 40°C. The KEEP WARM light on the LED will be lighted during this phase.

TEMPERATURE SETTING CHART

| | |
|-----------------|--|
| 98°C | Suitable for cooking most instant food and for hot beverage. (always return setting to 85°C after used) |
| 85°C | Most suitable for tea or coffee preparation |
| 60°C | Suitable for instant milk formulas, and taking medication. |
| 50° C and 40° C | Select your preferred lukewarm temperature for direct drinking of the water |

Ideal temperature setting is 85° C

Dispensing Water

Press the “UNLOCK” button ONCE. The “UNLOCK” LED will be on. Press the “POUR” button to dispense water

- If the POUR button is not selected within 10 seconds after selecting the UNLOCK button, the appliance will revert back to the LOCK position automatically.
- The dispensing function will NOT operate if the thermal pot power is not on.
- Thermal pot will NOT dispense if the top cover is not properly secured by the rear lid catch.

Automatic water outlet lock

This safety steps are to ensure that hot water will not be dispensed should the “POUR” button be accidentally depressed.

Reboil Function

- 1 Press “REBOIL” button once. Re-boiling LED will be ON.
2. Press again to switch back to “KEEP WARM” function.

3. After re-boil is completed, a beeper alarm will sound 5 times, and the KEEP WARM LED will be on.
 - Re-boil will not function if there is insufficient water inside.

Auto Cut-Off

1. Should the water boil dry the thermopot will automatically switch itself off. At the same time, the beeper sounds and a "LJ" sign is displayed on LCD panel.
2. The auto cut-off function will also operate when:
 - The power is switched ON, but water has not been filled.
 - Water level is below the MIN water level indicator and the Reboil function is activated.
 - The top cover not fitted properly and securely
 - When Hot water is added after power is connected.

To RESET the Auto Cut Off

Allow unit to cool, add water to the FULL level. Switch off the MAINS power supply, and then switch it ON again.

Care and Cleaning

Before cleaning, ensure that the power cord is pulled out, residue water is poured out and device is cooled.

Inner Pot and Cover

- Clean the appliance with a soft damp cloth.
- Never use any chemical or abrasive solution to clean your appliance
- Lime scales should be cleaned off every one to three months using a recommended descaler or citric acid.

Cleaning with citric acid

1. Fill $\frac{3}{4}$ the inner pot with water, then add 2–3 teaspoon of citric acid.
2. Press the “CLEAN MODE” button. *Cleaning time is about 1 hour 10 minutes (70 mins)*
3. Switch off the power. Remove power cord set. Pour away the water and wipe off any remaining lime scale and dirt with a soft sponge. Wash inner pot thoroughly
4. To deodorize any remaining citric acid smell, boil more water and discard.
5. To stop cleaning program, press “CLEAN MODE” button again.

Top Cover and Main Body

- When it is necessary the exterior surfaces may be cleaned with a soft damp cloth.
- Do not submerge unit in water. Wet the operation panel or place upside down to dry

Note:

- If alkaline water is used, lime stain may stick to the inner pot. Cleaning must be done regularly. Continued usage may result in the stain becoming difficult to remove.

Do not use the following items:

- Volatile oil or thinner
- Abrasive cleaning powder, nylon brushes etc.

Storage:

- Dry it thoroughly before prolonged storage.

THIS APPLIANCE IS STRICTLY FOR HOUSEHOLD USE ONLY